


BIOS Linear Array Setup with Production Bio-Dimming™ Module

Setup Instructions


Step 1. Verify Bio-Dimming Part Number contains the description "LINAR"



Step 2. Connect the Power Supply LED output to the Bio-Dimming Module: **Connect + to + and - to -**

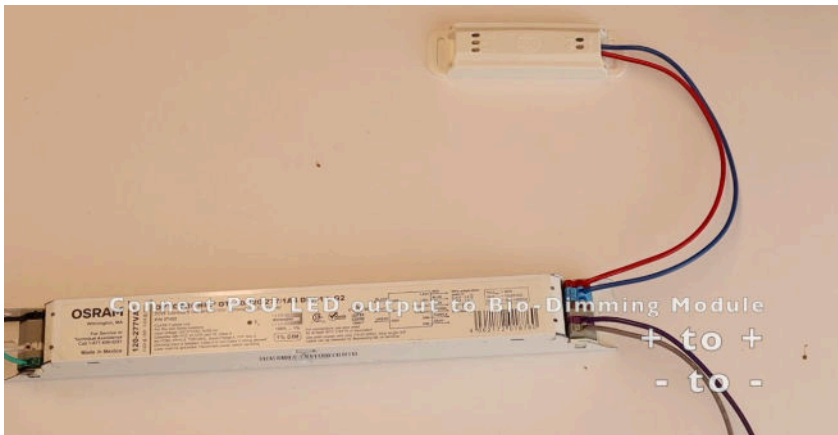

Step 3. Connect the two (2) +'s from the linear array together

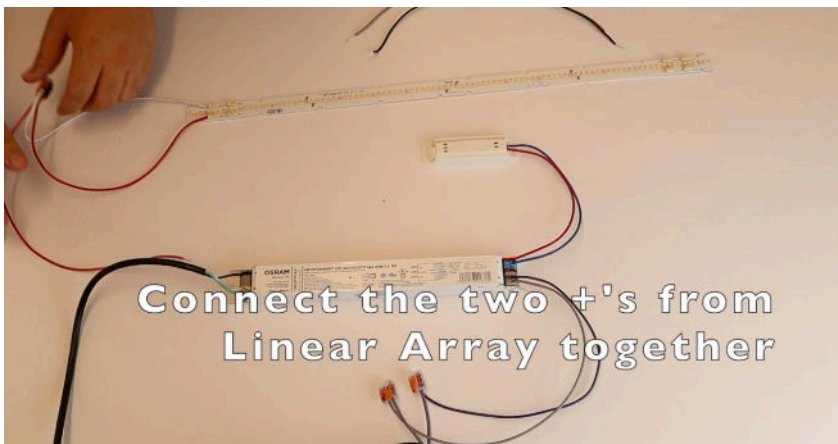


For video instructions
on how to setup BIOS
Linear Arrays with
BIOS Production Bio-
Dimming Modules
scan this QR Code.



BIOS Linear Array Setup with Production Bio-Dimming™ Module

Setup Instructions

- Step 4. Connect CW- from the Linear Array to BS- on the Bio-Dimming Module.
Connect WW- from the Linear Array to D- on the Bio-Dimming Module.
Connect +'s from the Linear Array to the + on the Bio-Dimming Module.

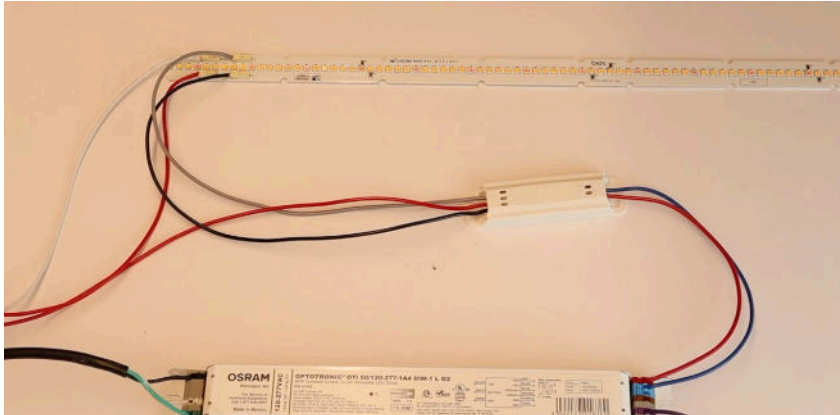

- Step 5. Turn ON lights at MAXIMUM POWER. Leave maximum power for at least 10 seconds.
Lights will flash to the warm channel and then back to the cool channel.



- Step 6. Setup and calibration are complete. Ready to ship!

For video instructions
on how to setup BIOS
Linear Arrays with
BIOS Production Bio-
Dimming Modules
scan this QR Code.

